

Installing the Starter Disable

1. Find the starter wire.

You will find the starter wire under the under the dash, near the steering column. You will need to pop off or unscrew the plastic panel below the steering column to get to these wires.

Once you have the panel off you should notice what will most likely be three main bundles of wires.

- A) One goes to the column-mounted controls on the left (indicators, possibly lights or cruise controls)
- B) One that that leads to the right-side stalk controls (wipers, electronic seat controls, etc.)
- C) One bundle that leads into the steering column itself. This last one is the one we want.


2. Cut the starter wire.

The starter wire most likely will be **yellow**.

3. Insert the new starter relay.

Blue wire = in (Goes toward key)



Red wire = out (Goes toward Starter).

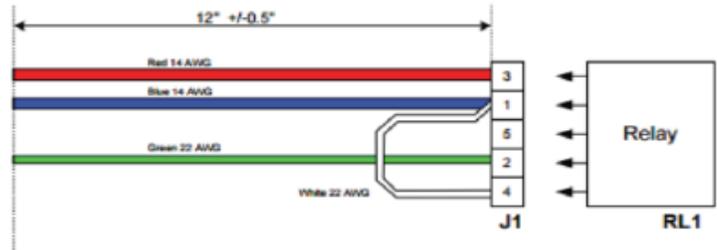


Wire Table

J1	Color	Description
1	Blue	from Ignition Switch
2	Green	LMU Output 0
3	Red	to Starter Solenoid Relay
4	White	jumpered to J1-1

4. Connect the Green wire from the starter relay to the green wire coming from the device's wires. If there are two green wires, it is pin 2 (20-wire harness only)

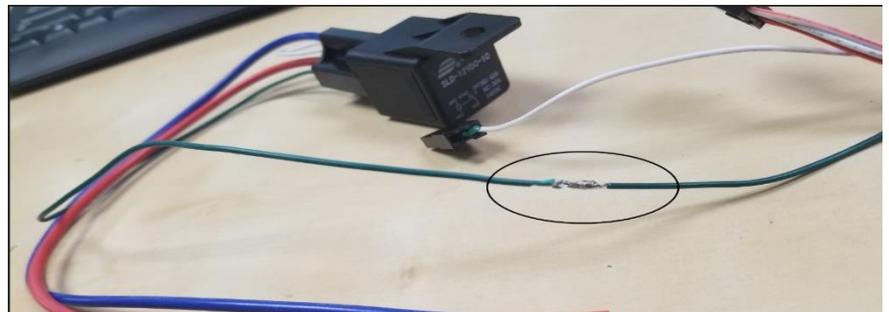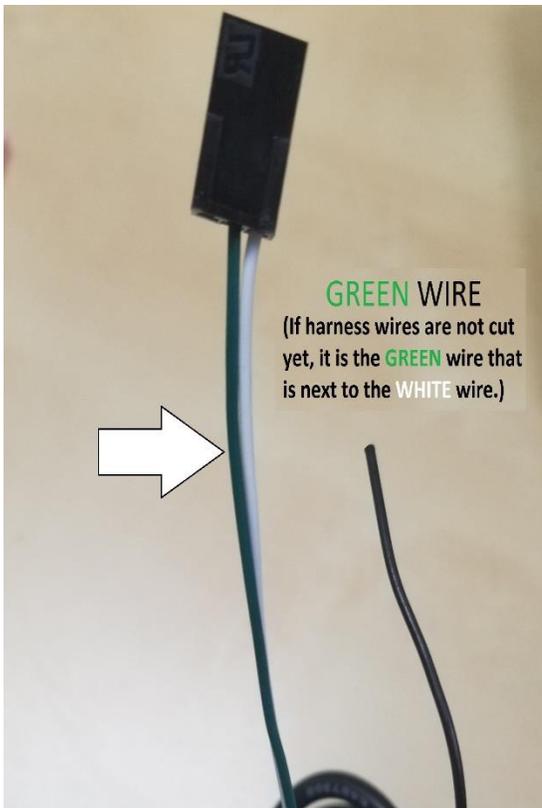

GREEN WIRE
(However, if the harness is cut, it is the **GREEN** wire that is located next to the **BLACK** wire, seen here.)

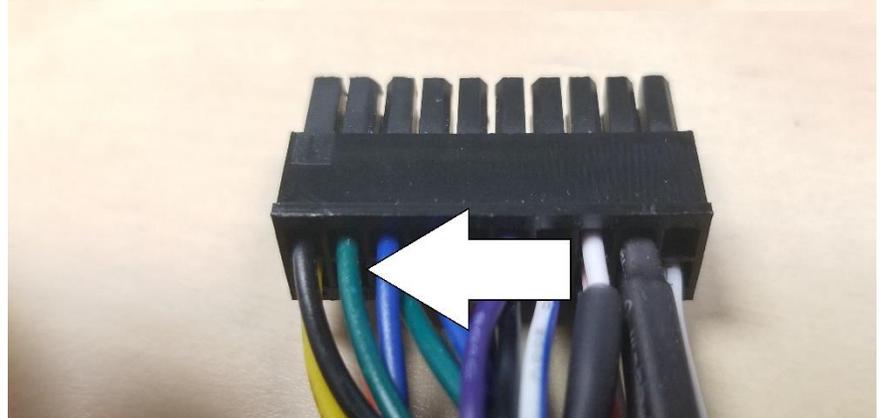

5. Please call your representative to test that it is wired correctly the first time at (818) 659-2031
Customer Service # (818) 659-2031- Support Email: Support@onestepgps.com - OneStepGPS.com